

CP1250

USER'S GUIDE

Contents

Introduction	1	Turning the Alert for a Super Maildrop On and Off	25
Control Buttons and Status Screen	2	Turning the Alert for a Specific Topic On and Off	26
Getting Started	3	The Quickview Feature.....	26
Turning Your Pager On	3	Establishing a Quickview Relationship for a Topic	27
Turning Your Pager Off	4	Receiving/Reading a Quickview Message	28
Backlight	4	Breaking the Topic/Quickview Relationship	30
Sending a Test Page to Yourself	4	Folders	30
Setting Up	5	Moving Messages to Folders	32
Using the Function Menu	5	Reading Messages in Folders	33
Setting the Time and Date	6	Moving Messages Between Folders	34
Setting the Pager Alarm	7	Moving All Personal Messages to Trash	35
Setting the Pager Alert Mode	8	Deleting Messages from the Pager	36
Setting the Pager Alert Pattern	9	Completing Your Tasks in the Task Folder	37
Turning Quiet Time On and Off	10	Setting Reminder Alarms for Events	39
Personal Message	12	Changing the Reminder Alarm	41
Receiving/Reading a Personal Message	12	Features	42
Maildrop Messages	15	Use and Care	45
Receiving/Reading Maildrop Messages	15	Care and Maintenance	45
Zooming In and Out on Messages	18	Battery	46
Setting the Alert for a Specific Maildrop	19	Battery Information	46
Super Maildrop Messages	21		
Receiving/Reading Super Maildrop Messages	21		

Congratulations on purchasing your Motorola® CP1250 pager. This new and exciting, eight-line, word message pager integrates messaging and advanced information services with other features, such as, phone list, zoom capabilities and event reminder/calendar.

This pager can receive three different types of messages depending upon the features available in your pager: personal (☛), maildrop (☛), and super maildrop (☛). *Personal messages* are messages your pager receives from friends, family, and from whomever you give your pager number. Maildrops and Supermaildrops are your information services such as news, weather and sports.

A full understanding of what this exciting product offers begins with reading the CP1250 User's Guide. This will provide helpful suggestions for both the first-time and experienced user. A detachable quick reference card on the back cover is included for your convenience.

INTRODUCTION

Control Buttons and Status Screen



 
- | | | |
|--|-----------------|---|
| | On/Read | Used to turn the pager on and to read a message. |
| | Function/Select | Used to display the Function menu and to select pager settings. |
| | Directional | Used to move around the display and through menus. |

INTRODUCTION

Turning Your Pager On

- 1 Press to turn your pager on. A start-up message is momentarily displayed and your pager activates the currently selected alert.
- 2 Press any button to stop the startup alert. The Status screen is displayed as shown on page 2.

While the pager is on and no activity is taking place, the Standby screen is displayed, an example of which is shown below.

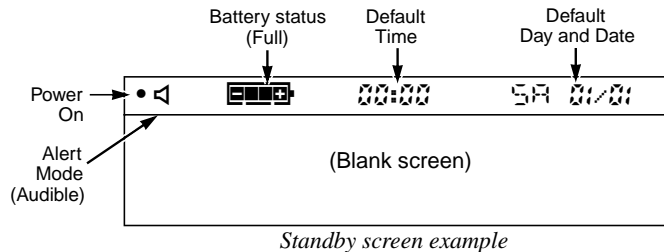

3

GETTING STARTED

Turning Your Pager Off

- 1 From any screen, press and release until ESCAPE is displayed on the Status screen. (↔ is flashing.)
- 2 Press to move to (TURN OFF).
- 3 Press to turn the pager off.
- 4 The TURN OFF? prompt is displayed. Press again. The Off screen is blank.

Backlight

The pager's backlight automatically illuminates in low-light conditions and automatically turns off when the pager returns to the Standby screen. You can manually turn the backlight on and off by pressing and holding for at least two seconds.

Sending a Test Page to Yourself

After you have read this guide and your pager has been activated by your service provider, send yourself a test page. If you have any problems, see "Functionality and Use of Your Pager" on page 44.

 
4

GETTING STARTED

Using the Function Menu

The Function menu provides access to many features of your pager through a series of icons and prompts. Press to access the Function menu. An example is displayed below.

Note: Some icons may or may not be displayed in your pager, depending upon your pager's features and whether it has messages.

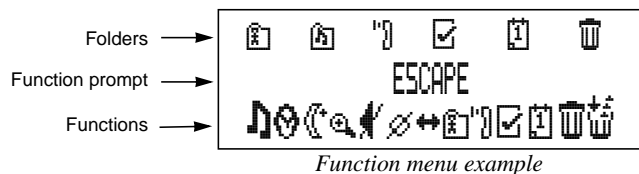

Getting Around the Function Menu

Press either or to move within the Function menu.

Note: To exit from any menu without accepting changes, press .

5

SETTING UP

Setting the Time and Date

- 1 On the Function menu, press to move to (SET TIME/ALARM).
- 2 Press . The Set Time screen is displayed.



- 3 Press to move to the hour field.
- 4 Press or to adjust the hour.
- 5 Press to move to the first minute field.
- 6 Press or to adjust the first minute.
- 7 Repeat Steps 5 and 6 until you have selected the second minute, method of time measurement (AM, PM, or 24hr), month, date, and year fields.
- 8 Press to accept the time and date change

 
6

SETTING UP

Setting the Pager Alarm

Your pager has an alarm that can be set for a specific time and date, or a specific time on a daily basis.

- 1 On the Function menu, press to move to (SET TIME/ALARM).
- 2 Press . The Set Time screen is displayed.
- 3 Press or . The Set Alarm screen is displayed.

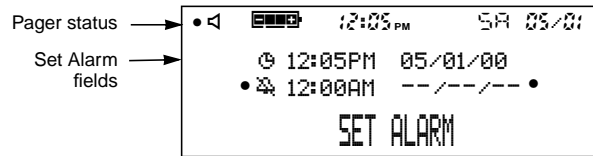

Set Alarm screen

- 4 Press . The alarm indicator () flashes.
- 5 Press to change the indicator from (alarm off) to (alarm on).
- 6 Press to move to the hour field.
- 7 Press or to adjust the hour.

7

SETTING UP

- 8 Repeat Steps 6 and 7 until you have selected both minute fields and the method of time measurement (AM, PM, or 24hr) field. If this is a *one-time only* alarm, use Steps 6 and 7 to set the month, date and year. If this is a *daily* alarm, leave the dashes (--) in the date fields and go to the next step.

Note: Only AM or PM can be changed. If you are using the 24hr time measurement, you cannot change it here.

- 9 Press to accept the alarm setting.

In the upper-left corner of the pager, is displayed, indicating the alarm is set. When the alarm expires, flashes and the pager either vibrates or emits an audible alert until any button is pressed. After any button is pressed, disappears from the Status screen if this was a one-time alarm.

Setting the Pager Alert Mode

The alert can be set as either audible or silent.

- 1 On the Function menu, press until one of two possible prompts is displayed: SET SILENT ALERT () to change from audible to silent alert mode) or SET AUDIBLE ALERT () to change from silent to audible alert mode).

8

 
SETTING UP

- 2 Press to accept the new alert mode. The pager emits a sample of the new alert

Setting the Pager Alert Pattern

The pager must be in the audible alert mode to select an alert pattern. There are ten alert pattern options: one standard alert (1), seven different pleasing alerts (2 through 8), a chirp alert (9), and no alert (10).

- 1 On the Function menu, press to move to (CHOOSE ALERT).
- 2 Press . The Alert pattern screen is displayed.



Alert pattern screen

- 3 Press or to move to the desired alert. A sample of each alert is emitted as you scroll through the selections.
- 4 Press to accept the selected alert. The pager emits the selected alert (for any selection except 10) as it returns to the Status screen.

9

SETTING UP

Turning Quiet Time On and Off

With quiet time on, the pager receives and stores new messages without any alerts for a certain period of time on a daily basis—regardless of whether the pager is in audible or silent alert mode. You establish this period of time. After you turn quiet time on, it activates on a daily basis (indicated by in the upper-left corner of the pager) until you turn it off.

- 1 On the Function menu, press to move to (SET QUIET TIME).
- 2 Press . The Set Quiet Time screen is displayed and the quiet time indicator (either if off or if on) is flashing.



Set Quiet Time screen

- 3 Press or to turn quiet time on (from to) or off (from to)

Note: If you are turning off quiet time, skip to Step 10.

- 4 Press to move to the starting hour field.
- 5 Press or to adjust the hour.

10

SETTING UP

- 6 Press to move to the first minute field.
- 7 Press or to adjust the first minute.
- 8 Repeat Steps 6 and 7 for the second minute and method of time measurement fields. Only AM or PM can be changed. If you are using the 24^{hr} time measurement, you cannot change it here.
- 9 Repeat Steps 4 through 8 for the ending quiet time.

Note: The end time must be later than the start time.

- 10 When you are finished, press to accept the selected quiet time period. One of the following indicators is displayed in the upper-left corner of the screen:
 - Quiet time on with no unread messages
 - with • flashing—Quiet time enabled with stored, unread messages.
 - —Quiet time off with no unread messages.
 - with • flashing—Quiet time off with stored, unread messages.

Note: When quiet time is turned on and the pager is set for audible alert, is displayed in the upper-left corner of the pager except during the actual quiet time period.

 
11

SETTING UP

Receiving/Reading a Personal Message

Your pager can have more than one unread message. A flashing • in the upper-left corner indicates at least one unread message in your pager. If programmed with reminder alerts, your pager alerts at predetermined intervals to remind you there are unread messages. Each flashing personal message indicator (•) on the Status screen represents an unread message. (A non-flashing • represents a previously read message.) If your pager has not received any messages, there are no personal message indicators displayed on the Status screen.

- 1 Your pager has received a message and an alert is being emitted. Press any button to stop the alert. The new message is automatically stored, along with the time and date it is received. The Status screen displays the number of the message (03: in this example because it is in the third message slot) and the first line of the message.

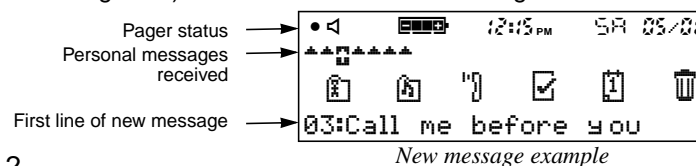

12

- 2 Press to display the first full screen of message text.

First 8 lines of personal message #3

```
03:Call me before you
leave the office. I have
some errands for you to
do. If you leave before
6:00, leave a message for
me at work. If you are
later than that, call me
at home. I hope you get
```

Continuation indicator (flashing)

New message example

If a flashing is displayed in the bottom-right corner of the screen, the message continues beyond the current screen. If there is no flashing , the display is at the end of the message.

 
- 3 To read the rest of the message *line-by-line*, press and release repeatedly.
To read the rest of the message *screen-by-screen*, press and release repeatedly.
To go to the *top* of the current message, press .

13

PERSONAL MESSAGES

To *rapidly scroll* through the rest of the message, press and hold down or .

The end of a message is indicated by the time and date the message was received.



End of message example

 
- 4 When you have finished reading a message, press to return to the Status screen.
Note: To save a message, move it to a folder. For more information, see "Moving Messages to Folders" on page 32.
- 5 To read other personal messages, press and/or to select the message you want to read. When a message slot is selected, the personal message indicator changes from • to .
- 6 Repeat Steps 2 through 5 to read your messages.

14

PERSONAL MESSAGES

Receiving/Reading Maildrop Messages

Your pager is capable of receiving Maildrop messages (Information Services). Maildrop messages are received the same way as personal messages and icon indicators. Maildrop with alert enabled (↓) and Maildrop with alert disabled (☐) are located on the second row of the display. If no maildrop messages have been received, no maildrop icons are displayed.

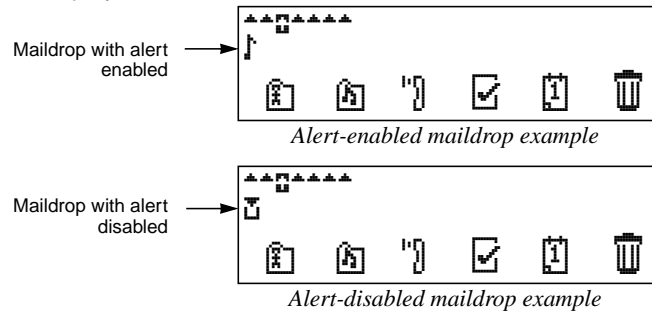


15

MAILDROP MESSAGES


You can set an alert for each maildrop (indicated on the Status screen by ↓). However, the default is no alert (☐). For more information about how to set a maildrop alert, see “Setting the Alert for a Specific Maildrop” on page 19.

 - 1 If the maildrop is *alert-disabled* (☐), press any directional button until the flashing ☐ is highlighted (and the indicator changes to ↓).



Alert-disabled maildrop message example

 If the maildrop is *alert-enabled*, press any button to stop the alert. The first line of the unread maildrop is displayed while ↓ flashes.

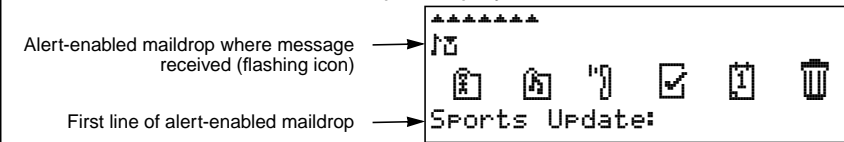


Alert-enabled maildrop message example

16

MAILDROP MESSAGES

 - 2 Press [right arrow] to display the Maildrop message. If your pager is equipped with Maildrop history, the first screen will be the history list. This list includes up to eight different messages for this maildrop. The most recently received message is displayed first (☐), followed by up to seven history messages (■).

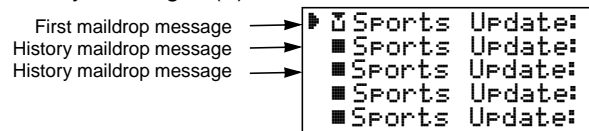

Maildrop history list example

- 3 If ↓ is pointing to the message you want to read, go to Step 4. Otherwise, press [left arrow] until the message you want is at the top of the list. **Note:** The list moves up; the indicator does not move down.
- 4 Press [right arrow] to display the first full screen of message text. If a continuation indicator is displayed (↓), the message continues beyond the current screen.
- 5 Reading the rest of the maildrop message is the same as reading a personal message.

17

MAILDROP MESSAGES

- 6 When you have finished reading the message, press [right arrow] until the maildrop history screen is displayed. To read another message in this same maildrop, repeat Steps 3 through 6.

- 7 When you have finished reading the messages in this maildrop, press [left arrow] to return to the Status screen.

Note: To save a message, move it to a folder. For more information, see “Moving Messages to Folders” on page 32.

- 8 To read messages in other maildrops (each indicated by a flashing ☐ or ↓ in the Status screen), press [left arrow] and/or [right arrow] until the maildrop is highlighted (☐ or ↓). Repeat Steps 4 through 6 to read messages in the selected maildrop.

Zooming In and Out on Messages

The zoom feature allows you to enlarge the size of your pager's message character display. (As a result, an eight-line display screen only displays four lines at one time.) This feature can be applied to all display text on your pager.

- 1 On the Function menu, press [left arrow] to move to [magnifying glass icon] (ZOOM IN).

Note: If [magnifying glass icon] (ZOOM OUT) is displayed, the pager is already in the larger text

 
18

MAILDROP MESSAGES

mode. Continuing here will change the text to its smaller size.

- 2 Press . The zoom mode is changed.

Note: The example below shows both zoom modes for one message.

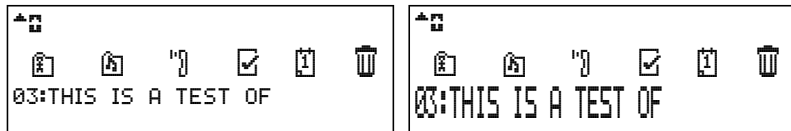

Unzoomed personal message text

Zoomed personal message text

Setting the Alert for a Specific Maildrop

You can establish different alerts for different maildrops. You can also have some maildrops with enabled alerts and others with disabled alerts. There are two different procedures for setting alerts depending upon the current alert mode (either audible or silent) of the pager. You can enable alerts and set the type of alert at the super maildrop level.

To turn a maildrop alert on or off when pager is in audible mode:

Make sure the maildrop you want (or) is highlighted (or).

- 1 On the Function menu, press to move to (CHOOSE MAILDROP ALERT).

- 2 Press . The Alert pattern screen is displayed.

- 3 Press either or until the alert you want flashes. A sample of each alert is emitted as you scroll through the selections. Select (NO MESSAGE ALERT) if you want to turn the alert off.

- 4 Press to accept the alert. If you turned the alert on, the pager emits this alert as it returns to the Status screen and whenever a message is received for this maildrop. The maildrop indicator has changed from to (for alert on) or from to (for alert off).

To turn a maildrop alert on or off when pager is in silent mode:

 
Make sure the maildrop you want (or) is highlighted (or).

- 1 On the Function menu, press to move to (SET MAIL ALERT ON) to turn the alert on or (SET MAIL ALERT OFF) to turn the alert off.
- 2 Press to accept the alert. If you turned the alert on, the pager (if equipped with a vibrator) vibrates as it returns to the Status screen and whenever a message is received for this maildrop. The maildrop indicator has changed from to (for alert on) or from to (for alert off).

Receiving/Reading Super Maildrop Messages

This feature, along with the use of topics, enables your pager to receive and store more powerful and sophisticated types of information services. Below is an example with alert-enabled () and alert-disabled () super maildrops displayed on the Status screen.


Note: Not all pagers are enabled with the supermaildrop option.

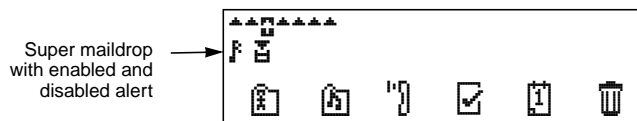

Status screen with super maildrops


You can enable alerts and set the type of alert at the Supermaildrop level. (see page 22). At the topic level you can also enable alerts. (see page 23). A flashing (alert-enabled) or (alert-disabled) in the Status screen indicates at least one unread super maildrop message has been received.

 - 1 If the super maildrop is *alert-disabled*, press any directional button until the flashing is highlighted (and the indicator changes to).

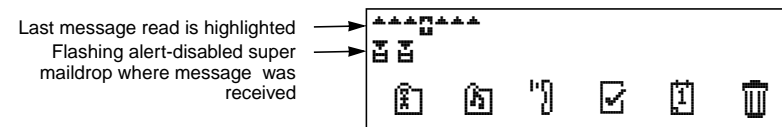


Alert-disabled super maildrop example

 If the super maildrop is *alert-enabled*, press any button to stop the alert. The first topic containing the unread message displays while flashes.

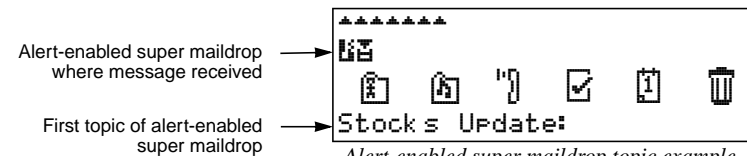

Alert-enabled super maildrop topic example

 - 2 Press to display the next screen. A list of topics is displayed as shown below.

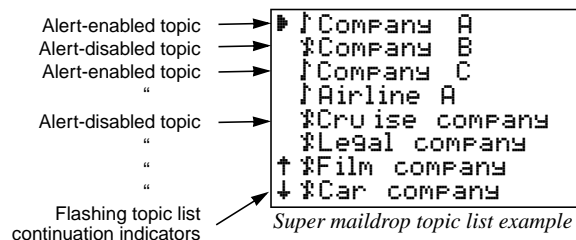

Note: Each topic indicator (or) containing unread messages flashes until all messages for that topic have been read. Because there can be more than eight topics per super maildrop, each topic list continuation indicator (or or both) will also flash if there are unread messages in topics either above or below the currently displayed screen.

23

SUPER MAILDROP MESSAGES

- 7 Reading the rest of a super maildrop message is the same as reading a personal message.
- 8 When you have finished reading the message, press until the super maildrop history screen is displayed. To read another super maildrop message repeat Steps 4 through 7.
- 9 When you have finished reading all of the messages in this topic, press until the Status screen is displayed.

Note: To save a super maildrop message, move it to a folder. For more information, see "Moving Messages to Folders" on page 32.

- 10 To read messages in other super maildrops (each indicated by a flashing or in the Status screen), press and/or until the super maildrop is highlighted (or). Perform Steps 2 through 9 to read messages in the selected super maildrop.

Turning the Alert for a Super Maildrop On and Off

 
Turning an alert on or off for a super maildrop is the same procedure as for a maildrop (see page 19), except for the screen indicators.

- 1 Make sure the super maildrop (or) you want is highlighted (or).

25

SUPER MAILDROP MESSAGES

- 3 If is pointing to the topic you want, go to Step 4. Otherwise, press or until the topic you want is at the top of the list.
- 4 Press to display the topic information. If your pager is equipped with maildrop history, the first screen will be the maildrop history list for this topic as shown in the example. This is a list of up to eight messages for this topic. The most recently received message is displayed first () , followed by the list of history messages ().



Message history list example

Note: Each message indicator (or) flashes until it has been read.

- 5 If is pointing to the message you want to read, go to Step 6. Otherwise, press or until the message you want is at the top of the list.
- 6 Press to display the first full screen of message text. If a continuation indicator is displayed () , the message continues beyond the current screen.

24

SUPER MAILDROP MESSAGES

- 2 See page 19 for the beginning of the maildrop alert procedures. When you have finished, the super maildrop indicator is either (alert off) or (alert on).

Turning the Alert for a Specific Topic On and Off

Topic alerts can be turned on only if the entire super maildrop is alert-enabled. After assigning a unique alert to the super maildrop, that same alert is used for each alert-enabled topic within that super maildrop. Turning an alert on or off for a topic is the same procedure as for a maildrop alert.

- 1 Make sure the topic list is displayed and the topic you want (or) is at the top of the list.
- 2 See page 19 for the beginning of the maildrop alert procedures. When you have finished, the topic indicator is either (alert off) or (alert on).

The Quickview Feature

Quickview allows you to read a super maildrop message directly from the Status screen. A quickview "points" directly to a super maildrop topic, which can be read with the press of one button. Without quickview, you would have to go through many steps to read this message. You can assign up to ten quickviews to different topics within the same or different super maildrops.

26

 
SUPER MAILDROP MESSAGES

Note: If you use quickview to display a message, you cannot define an alert for it or move it to another folder. You must access the message in the super maildrop topic list to perform these functions.

Establishing a Quickview Relationship for a Topic

Make sure the super maildrop containing the topic you want is highlighted (▣ or ▤) in the Status screen.

- 1 Press **○**. The topic list is displayed.
- 2 After using either **▲** or **▼** to position the desired topic at the top of the list, press **○** to display the Function menu.
- 3 Press **▶** to move to **⚡** (COPY TO QUICKVIEW).
- 4 Press **○**. The selected topic is now a quickview and the pager returns to the list of topics.
- 5 Press either **▲** or **▼** to return to the Status screen. In the example, **⚡** is displayed, indicating the quickview has been established.




27

Quickview example on the Status screen

Receiving/Reading a Quickview Message

You can have more than one unread quickview message as indicated by each flashing **⚡** or **⚡** (highlighted) in the Status screen.

 
- 1 If the quickview is *alert-disabled*, the last message read is still highlighted while **⚡** flashes, indicating the quickview slot receiving the latest unread message. Press any directional button until **⚡** is highlighted (▣).



Alert-disabled quickview example


If the quickview is alert-enabled, press any button to stop the alert. The first line of the unread quickview message is displayed while **⚡** flashes.

 28

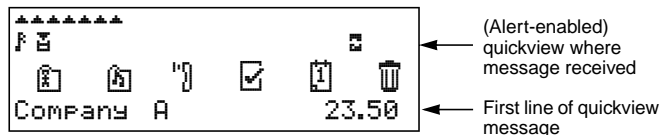

Alert-enabled quickview example

 - 2 Press **○** to display the first full screen of message text.

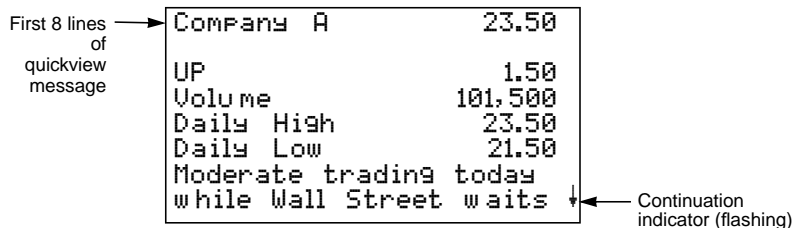

Quickview message example

If a continuation indicator is displayed (**+**), the message continues beyond the current screen.

- 3 Reading the rest of a quickview message is the same as reading a personal message.

29

- 4 When you have finished reading the message, press **○** until the Status screen is displayed.

Note: To save a quickview message, you can only move it to a folder from the super maildrop, not directly from the quickview. For more information, see "Moving Messages to Folders" on page 32.

Breaking the Topic/Quickview Relationship

There are two different locations from which you can break a topic relationship with quickview and thus, delete the quickview:

- From the **⚡** or **⚡** displayed in the Status screen (representing the relationship you want to break)
- From the quickview message itself (see page 28).

Note: This procedure is only for breaking the relationship between a topic and a quickview; no messages are being deleted or moved.

- 1 Make sure that quickview is highlighted in the status screen or that you are reading the quickview.
- 2 Press **○** to display the Function menu.
- 3 Press **▶** to move to **✕** (REMOVE FROM QUICKVIEW).

30

- 4 Press . The quickview relationship is broken for this topic. The Status screen is displayed, without the for this topic.

Note: You did not delete or move any messages; you only removed the quickview assignment for this topic.

Introduction to Folders

Your pager has a system of folders in which you can save specific messages and where you can perform certain tasks upon them. The folders are:

- Personal ()—used to store personal messages
- Maildrop ()—used to store information services messages (maildrop and super maildrop)
- Phone List ()—used to store phone numbers and names
- Task List ()—used to create a “to do” checklist for specific messages
- Event List ()—used to set an alarm for specific messages
- Trash ()—used to store messages to be deleted.

31

FOLDERS

Most of these folders require the same procedures to move messages to them from the Status screen and between them (except for the Event List, which has additional procedures). The procedures in this section apply either to all folders (as in “Moving Messages to Folders”) or to specific folders (as in “Deleting Messages from the Pager (Emptying the Trash)”).

Moving Messages to Folders

Note: After moving a message into a folder, you cannot move it back to the Status screen. It can only be moved to another folder.

On the Status screen, make sure the icon representing the message you want to move is highlighted (for example, , , or).

- 1 Press . The Function menu is displayed.

- 2 Press until the desired folder flashes.

Note: Either (Personal Folder) or (Maildrop Folder) is displayed for the MOVE TO FOLDER function, depending upon whether you have highlighted a personal or a maildrop message.

- 3 Press . The message you highlighted is removed from its slot on the Status screen and is moved to the assigned folder.

32

FOLDERS

- 4 If this move was to any folder except the Event List, you have finished this procedure. If this move was to the Event List, go immediately to “Setting Reminder Alarms for Events (the Event List)” on page 39.

Note: Any folder containing stored messages no longer displays the FOLDER EMPTY indication when highlighted.

Reading Messages in Folders

- 1 On the Status screen, press any directional buttons until the folder you want to open is highlighted: (Personal Folder), (Maildrop Folder), (Phone List), (Task List), (Event List) or (Trash).

- 2 Press to open the folder. A list of messages is displayed. In the example below, a personal message is in the Personal Folder. It is displayed with its personal message indicator (*).

First line of personal message →

*Call me before you

Message in the Personal Folder example

- 3 Press until the message you want to read is at the top of list.
4 Press to begin reading the message.

33

FOLDERS

Moving Messages Between Folders

Before you can move a message from one folder to another, you must first have the message text displayed on the pager. (This is only necessary *between* folders, not from the Status screen to a folder. To review that procedure, go back to Steps 1 through 4 on page 32.)

Note: You can freely move messages between all folders (including the Trash). However, after you have moved a message to a folder, you cannot move it back to the Status screen.

- 1 With the text of the message displayed, press . A folder-specific function menu is displayed as shown in the example below.



Phone List Function Menu


 
- 2 Press until the target folder (the folder to which you are moving this message) flashes. The MOVE TO (*folder name*) text is displayed, where (*folder name*) is the name of the target folder.

- 3 Press . The message is moved to the new folder and the pager returns to the Status screen. If this message was the last one in the folder it came from, the Status screen displays FOLDER EMPTY.


34

FOLDERS

 
Note: If you are moving this message to the Event List additional steps are involved. See "Setting Reminder Alarms for Events (the Event List)" on page 39.




Note: If the message you moved was a super maildrop topic with a quickview relationship,  is highlighted before any new messages are received. When this occurs, only  is displayed on the Status screen when attempting to read the message. This is because quickview is not a folder.

Moving All Personal Messages to Trash

Rather than having to individually move all previously read personal messages to the Trash, you can move them together using  (MOVE ALL TO TRASH).


Note: This function only moves previously read personal messages and is only available on the Status screen. Maildrop and super maildrop messages must be individually moved to the Trash.

Make sure a previously read personal message is highlighted () on the Status screen.

- 1 Press .
- 2 Press  until  (MOVE ALL TO TRASH) flashes.

 
35






 
FOLDERS


- 3 Press . All previously read personal messages are moved to the Trash.




Note: To remove these from the pager, you must empty the trash as described in the next procedure.

Deleting Messages from the Pager (Emptying the Trash)

Deleting messages from your pager is actually a two-procedure process. After you have moved the message(s) to the Trash, you must use the empty trash function () to actually remove the message(s) from your pager's memory. While messages are in the Trash, they can still be moved to other folders. Only when you empty the trash are you actually deleting the messages from your pager.

- 1 On the Status screen, press  until  (TRASH) is highlighted.
- 2 Press . A list of all messages in the Trash is displayed.
- 3 Press . The Trash function menu is displayed.
- 4 Press  until EMPTY TRASH () is displayed as shown in the example on the next page.

Note:  is only displayed when there are messages in the Trash.

- 5 Press . The prompt EMPTY TRASH? is displayed with  pointing at .


36

FOLDERS

 



Trash function menu example

Note: If you continue with this procedure, all messages in the Trash are deleted, not just the one at the top of the list.

- 6 Press . The messages are deleted from the pager. The pager returns to the Status screen which displays FOLDER EMPTY, indicating all messages have been deleted from the Trash.

Completing Your Tasks in the Task Folder


The Task Folder can turn your messages into a checklist of things to do. After you move a message into the Task List, the message indicator is changed to . Upon completion of this task, you can mark it complete ().

- 1 On the Status screen, press  until  (TASK LIST) is highlighted.





 37


FOLDERS

- 2 Press . The Task List is opened and a list of tasks is displayed.



Task messages in Task List example

 - 3 Press  until the task you want to complete is at the top of the list.
- 4 Press . The Task List function menu is displayed.
- 5 Press  until  (SET TASK STATUS) is flashing.

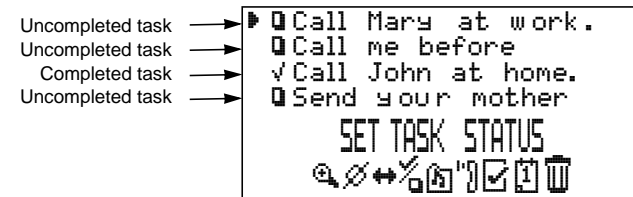

Task List function menu example

38

FOLDERS

- 6 Press . The message indicator changes from to . This task has been completed and will be moved to the Trash Folder at midnight (unless you move it to another folder).

Note: Although the task has been completed, it does not move to a different position within the Task List. As per the example above, the completed task remains in the third position on the list.

 
- 7 To complete more tasks, repeat Steps 4 and 5 as necessary.

Setting Reminder Alarms for Events (the Event List)

Note: You must set the reminder alarm for the event before the pager reverts to Standby mode, otherwise, the move does not take effect and you will have to move the message to this folder again.

As soon as you move the message to the Event List, a screen similar to the example below is displayed.

Note: The time and date default to the current time and date.




Set Event Time example

39

FOLDERS

- 1 Press to move to the hour field.
- 2 Press and/or until the hour of the alarm is set.
- 3 Press to move to first minute field.
- 4 Repeat Steps 2 and 3 until you have set the second minute, method of time measurement, and date fields for the alarm.

 Note: You can set a daily alarm by selecting --/-- in the date field.
- 5 Press . The alarm is set and the pager returns to the Status screen.
- 6 When the event's alarm time is reached, the alarm is emitted (depending upon the alert mode [either audible or vibrate]).
- 7 Press any button to stop the alarm. is flashing.
- 8 Press to open the Event List. The indicator has changed from to as shown below. If this is a one-time only alarm, the message is automatically moved to the Trash at midnight. Otherwise, the message remains in the Event List until it is manually moved to another folder.



Event List expired alarm message example

40

FOLDERS

- 9 Press again to read the message.

Note: If you move an Event List message with its reminder alarm set to any other folder, it loses its alarm. If you move it back to the Event List, you must reset the reminder alarm.

Changing the Reminder Alarm (in the Event List)

There are various reasons why you might need to reset the reminder alarm. You may need to remind yourself about an event for which the one-time reminder alarm has already expired, or you might need to change the alarm time number. Whatever the reason, you can reset the reminder alarm.

In the Event List, make sure the event you want is at the top of the list.

- 1 Press to display the Function menu.
- 2 Press until (SET EVENT TIME) flashes.
- 3 Press . Reset the reminder alarm using the steps in "Setting Reminder Alarms for Events (the Event List)" on page 39.

41

FOLDERS

Battery Gauge

Located on the Status screen, the battery gauge indicator displays the battery energy level. The five indicators range from full to low: (full), (3/4), (1/2), (1/4), and (low).

Duplicate Messages

If the same message is received more than once, DUPLICATE is displayed at the beginning of the new message. This new message also contains the latest time and date stamp.

Emergency Call

Any of the three message types (personal, maildrop, or super maildrop) can be used to send an emergency call. The emergency message immediately displays on the pager, regardless of the pager's alert mode. A unique alert emits—different from any other alert on the pager—and EMERGENCY CALL is displayed, indicating this type of message has been transmitted. Read this message as you would any other. For information about how to send an emergency call message, contact your service provider.

42

FEATURES

Errored Data Indicator

If errored data is received, ■ flashes in the character position where the errored data was received.

Key Click

If your pager is equipped with this feature and the pager is in audible alert mode (🔔), a “click” is emitted whenever a button is pressed. If the pager is in silent alert mode (🔕), no “click” is emitted.

Memory Full Indicator

There are two different situations that can produce a memory full condition: either all 26 personal message slots are occupied; or there is space for less than 130 characters in memory. When this condition is reached, ⚠ is displayed on the Status screen. If a new personal message or any message containing more than 130 characters is received, the oldest personal message is overwritten. Until this condition is corrected (by deleting unwanted messages or emptying the Trash), messages will continue to be overwritten.

43

FEATURES

Missing Fragment Indicators

If a portion of the message has not been received, either the <...> (for alphanumeric) or _____ (for long numeric) missing fragment indicator is displayed.

Out of Range

If your pager is equipped with this feature, and if you are outside your paging coverage area, ⚠ is displayed. As long as ⚠ is displayed, your pager cannot receive messages.

Cleaning Your Pager

To clean smudges and grime from the exterior of your pager, use a soft, non-abrasive cloth moistened in a mild soap and water solution. Use a second cloth moistened in clean water to wipe the surface clean. Do not immerse in water. Do not use alcohol or other cleaning solutions.

Functionality and Use of Your Pager

For questions pertaining to the functions and use of your Motorola pager please visit our web site at www.motorola.com/pagers. For questions pertaining to your paging service, contact your paging service provider.

44

FEATURES

Care and Maintenance

The CP1250 pagers are durable, reliable, and will provide years service; however, they are precision electronic products. Water and moisture, excessive heat, and extreme shock may damage the pager components and impair the optical quality of the display. Do not expose your pager to these conditions. If repair is required, the Motorola Service Organization, staffed with specially trained technicians, offers repair and maintenance facilities throughout the world.

You can protect your pager purchase with an optional extended warranty covering parts and labor. For more information about warranties, please contact your paging service provider or retailer.

Battery Information

Your Motorola CP1250 pager operates with one AAA-size alkaline battery.

Note: Installing the battery incorrectly could result in resetting the alert mode and time to their default settings, and all messages could be deleted.

 
45

USE AND CARE

Replacing the Battery

Turn the pager off and place the pager with the display side down as shown.

- 1 Unlock the battery door by sliding the door lock away from the battery door.
- 2 Slide the battery door in the direction of the arrow indication on the battery door.
- 3 Lift the battery door away from the housing to remove it.
- 4 Lift the battery out of the battery compartment, noting the positive (+) and negative (-) markings on both the battery and the pager housing.
- 5 Insert the new battery. Make sure you match the positive and negative markings on the battery with those on the pager housing.
- 6 Align the grooves on the battery door with the grooves on the pager housing and slide the battery door closed.
- 7 Slide the battery door lock toward the bottom of the pager to lock the battery door.

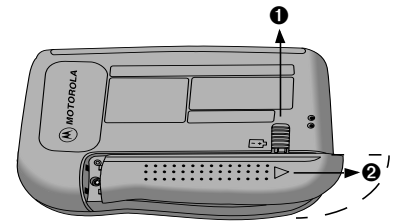

46

BATTERY

Patent Information

This Motorola product is manufactured under one or more Motorola U.S. patents. These patent numbers are listed inside the housing of this product. Other U.S. patents for this product are pending.

47


PATENTS

48

NOTES

49

NOTES

Ⓜ, Motorola, Motorola CP1250 Advanced Information Services Word Messaging Pager, FLEX™, info, and  are trademarks or registered trademarks of Motorola, Inc. Reg. U.S. Pat. & Tm. Off.

© 1998 by Motorola, Inc. All Rights Reserved.
Paging Products Group
1500 Gateway Blvd., Boynton Beach, FL 33426-8292
Printed in U.S.A. 6/98



6881032B60-O

Motorola CP1250 Word Pager Quick Reference Card

Pager Indicators (top line of pager)

- On
- Ⓞ On, Quiet Time enabled
- ◀ Audible alert mode
- ⚡ Pager alarm enabled
- ⚡ Memory full
- 🔋 Battery full indicator
- 🔋 Battery 3/4 full indicator
- 🔋 Battery 1/2 full indicator
- 🔋 Battery 1/4 full indicator
- 🔋 Battery low indicator
- ▽ Out of range indicator

Message Icons

- 📧 Personal message, selected
- 📧 Personal message, unselected
- 📧 Maildrop message, alert enabled, unselected*
- 📧 Maildrop message, alert disabled, unselected*
- 📧 Super maildrop message, alert enabled, unselected*
- 📧 Super maildrop message, alert disabled, unselected*
- 📧 Topic, alert enabled
- 📧 Topic, alert disabled
- 📧 History message

*These icons, when selected, are displayed in reverse video.

Message Icons (continued)

- ↕ Continuation indicators (up and down)
- 📞 Phone List message
- 📋 Task List message, not completed
- ✓ Task List message, completed
- ⚡ Event List message, alarm active
- ⚡ Event List message, alarm expired
- 📧 Quick View message
- 📧 Errored data indicator
- <.> Alphanumeric missing fragment indicator
- Long numeric missing fragment indicator
- ⊥ Truncated message

Folder Icons

- 📧 Personal Folder, unselected*
- 📧 Maildrop Folder, unselected*
- 📞 Phone List, unselected*
- ✓ Task List, unselected*
- 📧 Event List, unselected*
- 🗑️ Trash Folder, unselected*

*These icons, when selected, are displayed in reverse video.

Function Icons (bottom line of pager)

- 🔊 Choose Alert function
- 🕒 Set Time/Alarm function
- 🕒 Set Quiet Time function
- 🔍 Zoom In function
- 🔍 Zoom Out function
- 🔊 Set Silent Alert function
- 🔊 Set Audible Alert function
- 🔊 Turn Off function
- ⏪ Escape function
- 🕒 Set time indicator
- 🔊 Alarm enabled indicator
- 🔊 Alarm disabled indicator
- 🕒 Quiet Time enabled indicator
- 🕒 Quiet Time disabled indicator
- 🔊 Choose Maildrop Alert function
- ⚡ Quick View function enabled
- ⚡ Quick View function disabled
- 📧 Set Task Status function
- 🗑️ Empty Trash function

Quick Steps

Setting the Pager Alarm

- 1 Press until ESCAPE is displayed.
- 2 Press until is displayed.
- 3 Press and then or .
- 4 Press to move to the alarm indicator.
- 5 Press or until (alarm on) is displayed.
- 6 Press to move to the next field.
- 7 Repeat Steps 5–6 to adjust the hour, minutes, time measurement fields (if a daily alarm) plus month, date, and year fields (if a one-time alarm).
- 8 Press to accept the alarm setting.

Turning Quiet Time On and Off

- 1 On the Function menu, press until is displayed.
- 2 Press .
- 3 Press or to turn on () or turn off () quiet time. If turning off, skip to Step 8.
- 4 Press to move to the starting hour field.
- 5 Press or to adjust the hour.
- 6 Repeat Steps 4–5 to set both of the minute fields and the time measurement method.
- 7 Repeat Steps 4–5 until the end time is set.
- 8 Press to accept the quiet time setting.

Setting Reminder Alarms for Events

- 1 With the SET EVENT TIME screen displayed (the message has just been moved to the Event List), press to move to the hour field.
- 2 Press or to select the hour.
- 3 Press to move to the first minutes field.
- 4 Repeat Steps 2–3 until you have set the second minute, time measurement method, and date fields (if one-time only) for the alarm.
- 5 Press to set the reminder alarm.
- 6 When the alarm time is reached and the alarm is emitted, press any button.
- 7 Press to open the Event List.
- 8 Press to read the message.