

H200 Quick Start Guide
















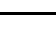
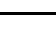

Charging the Battery before first Use

Please charge H200 full before first use.










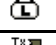





1. Plug your charger into a main socket.
2. Insert the DC plug of the charger into the bottom of device. “ “ on DC plug must face up.
3. Charging is complete when the LED on device is colored green.
4. When the charging is complete, please unplug your device from its charger, grasp and pull the plug, not the power cord.

Icons for Status and Main Menu Screen







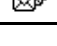

1. Status Icons

	One way mode		Two way mode		No Service mode
	Battery status		Key lock		Device lock
	Vibration alert		Silent alert		Cap. Lock mode
	Cap. mode		Sending in process		New message
	Alt. Lock mode		Alt. mode		Sending failed
	Sending success		Roaming		Unread Information


2. Main Menu Icons



	Read message		Write message		Contact
	Schedule		Task		Memo
	Preference		Alarm		Alert
	Lock		World Clock		Game
	TX		Calculator		Mymail (option)

Control keys



	Return to previous screen without saving.
	Capitalize the next letter. Press two times for Cap. Lock mode
	Add a space during editing. Press Alt key and Space for Symbol character.
	Select the highlighted option or save settings.
	Move to Right, Left, Up and Down within a field.
	Activate the Alt. mode. Press two times for Alt. Lock mode.
	Move to bottom menu.
	Delete one character to the left of the cursor. Delete the message from the list.




Setting H200

Select  (Preference) in the main menu screen and set the necessary information in each field (Date & Time, Owner Information & Alerts setting etc.)



Use  key to select the highlighted menu and/or to save and  key to return to the previous menu.




1. Set Date & Time

Press  key when  (Preference) is highlighted in Main Menu Screen.



Select "4.Setup" with Up/Down Key and press  key. Press  key again when "1. Set Date & Time" is highlighted. Enter the current Time and Date, Time format and Date format and press  key to save.




2. Display Settings

Press  key when  (Preference) is highlighted in Main Menu Screen.



Select "4.Setup" with Up/Down Key and press  key. Press  key again when "2. Display Settings" is highlighted. Adjust the contrast and select the Font size and the Pop-up box option with Left/Right key. Press  key to save.

3. Owner Information

Press  key when  (Preference) is highlighted in Main Menu Screen.

Select "4.Setup" with Up/Down key and press  key. Press  key again when "3. Owner Information" is highlighted. Add your information and press  key to save.

4. Alert Setting

Press  key when  (Preference) is highlighted in Main Menu Screen.





Press  key when the “1. Alert Settings” is highlighted. Please select the preferable alert type with Left / Right key. You can move the field with

Up/Down key. Space key can be used for Preview Alert. Press  key to save after completing the settings.

Read Menu Management





Select  (Read) in the main menu screen. Read menu has the following 9 options.

Read	→	1. InBox	: Received messages
		2. Information	: Received information
		3. Draft	: Draft contents
		4. Personal	: Personal folder
		5. Business	: Business folder
		6. Misc.	: Misc. folder
		7. Outbox	: Messages on sending process
		8. Sent	: Sent messages
		9. Delete	: Delete the folder one time


- 1. Read a message** : Press  key when the message you want to read is highlighted in Inbox List. When a new message arrives, please select “Yes” when a popup box is displayed. Then, Inbox View Screen will be opened.
- 2. Reply a message** : Select the **Reply** in the bottom menu from the Inbox List Screen or Inbox View Screen. Select **Custom Msg** to compose the reply or Canned message for automatic reply. After composing the custom Msg., select **Send** in the bottom menu and press  key to send.
- 3. Forward a message** : Select **Forward** in the bottom menu from the Inbox List Screen or Inbox View Screen. And follow the Writing process.
- 4. Move a message** : Select **Move** in the bottom menu from the Inbox List Screen or Inbox View Screen. Select the category you want in the popup screen and press  to move the message to selected category.
- 5. Delete a message** : Select **Delete** in the bottom menu from the Inbox List Screen or Inbox View Screen and press  key to delete the highlighted message.













Write Management (Send a message)

Select  (Write) in the main menu screen and you can compose the message and send the messages to the addressers.

1. Select the Address in the address list or add [One Time Address] or [New Address]. You can enter the alphabet of the name to search for the address directly. “ ”mark will be displayed in front of selected address.
2. Move to **Compose** in the bottom menu using  key and press  key.
3. Compose the message and select **Send** in the bottom menu using  key and press  key to send a message to address.

Contact Management (Address book)

Select  (Contact) in the main menu screen and you can manage the address book here.

1. **Add New Contact :**
 - Select **AddNew** in the bottom menu using  key and press  key.
 - Add the new contact and select **Save** in the bottom menu and press  key. When popup box displays, select the category for the address and press  key.
2. **Edit Contact :**
 - Select the address you want to edit using Up/Down key in the address List.
 - Select **Edit** in the bottom menu using  key and press  key.
 - Edit the contact as you want and select **Save** in the bottom menu and press  key to save.
3. **Select Contact List :**
 - Select **Categ's** in the bottom menu using  key and press  key.
 - Select the Category (All/Personal/Business/General) you want and press  key.
4. **Delete Contact :**
 - Select the address you want to delete using Up/Down key in the Address List.
 - Select **Delete** in the bottom menu using  key and press  key in order to delete the highlighted contact from the list.

If you need more information

Please read the H200 User Manual on the CD ROM for more information.