


NIXXO PLAINUM OVERVIEW

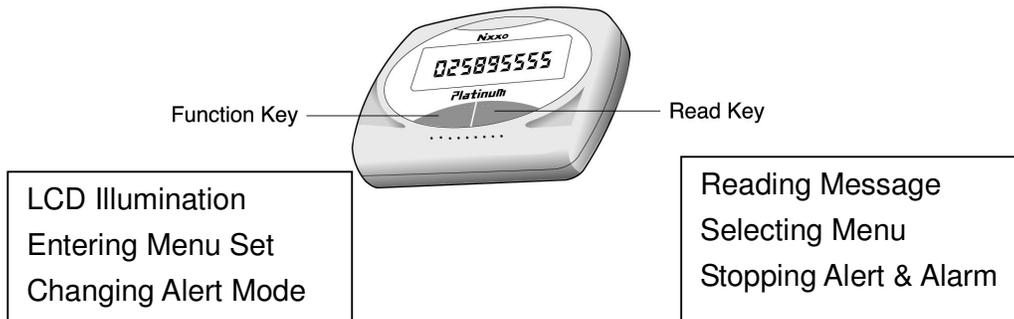

ICON MEANING



ICON	MEANING
	Beep alert is on
	Vibrate alert is on
	Melody alert is on
	Message is locked
	Alarm is on
	Indicates low battery
	Indicates service area
	"Auto power" is on
	Duplicated message received
	Message is continued.

TO TURN PAGER ON/OFF

➤ Turn On

- Press Function Key for 2 seconds.

➤ Turn Off

- Press Function Key two times in standby mode. "Tone on" or "Tone off" is displayed
- Press Read Key for selecting menu until you reach "Power off?"
- Press Function Key to set power off.
- Even if turn off the pager, the screen still displays date & time. But all icons are disappeared and the Read & Function keys do not work at all.

TO SET DATE & TIME

- Press Function key two times in standby mode. "Tone on?" or "Tone off" is displayed.
- Press Read Key to display "Set Time" menu.
- Press Function Key to set time. The month is blinking.
- Press Read Key to select desired month.
- Press Function Key to confirm
- Repeat above steps to set date and time.

TO SET ALERTS

➤ To set beep or vibrate alert

- Press the Function Key two times in standby mode.
- "Tone Off?" or "Tone on?" is displayed.
 - "Tone on" means beep alert
 - "Tone off" means vibrate alert

- Press the Function Key to change alert mode.
- **To set melody alert**
- Press the Function key two times to display menu.
- "Power off?" is displayed
- Press the Read key repeatedly until "Melody set" is displayed.
- Press the Function key
- Press the Read key repeatedly to select 1 of the 5 lists
 - Melody 1 to 4 : melody alert, melody 5 : tone alert

TO READ MESSAGES

When a message is received, press Read Key to view the message

- If the pager has 16 messages, "Page Full" is displayed
- If the pager has no message, "No Page" is displayed.
 In case the pager has over 16 messages, it erases the oldest one to make room for the newest one.

To read a message in memory, do the following;

- Press Read Key. The first display is message received time stamp.
 - 01] is the sequence of the message in memory.
 - a (the last alphabet) means message address.
- Press Read Key again. Then you can read message.
- The recent message is displayed at first.
- If the message is continued to next page, the icon is displayed.
- Press Read Key again to read the next ones.

TO ERASE INDIVIDUAL MESSAGE

- Press Function Key after reading a message, "ERASE?" is displayed.
- Press the Function Key to delete a message.
- The screen shows "ERASE"

TO ERASE ALL MESSAGES

- Press the Function Key two times in standby mode. "Turn off" or "Turn on" is displayed.
- Hold the Function key until "ERASE ALL" is displayed
- Press the Function key to delete all stored message

TO LOCK A MESSAGE

➤ To set lock function

- Press the Function Key two times in standby mode, "Tone off" or "Tone on" is displayed.
- Hold the Function key until "ERASE ALL" is displayed
- Press the Read key until "Lock Fcn on" or "Lock Fcn off" is displayed.
- Press the Function for setting
- Press the Read key to select "Lock Fcn on"
- Press the Function key to confirm.

➤ To lock a message

- Press the Read key to read a message
- Press the Function key. "ERASE ?" is displayed.
- Press the Function key again. "Lock?" is displayed.
- Press Function Key to confirm.
- You can see lock icon when you reads the locked message.

TO SET ALARM

- Press the Function key two times in standby mode. "Tone on?" or "Tone off" is displayed.

- Press the Read Key repeatedly to display "Set Alarm" menu.
- Press the Function Key to set alarm. The hour is blinking.
- Press the Read Key to select desired month.
- Press the Function Key to confirm. The minute is blinking.
- Press the Read key to select desired minute.
- Press the Function key to confirm. "on" or "off" is blinking
- Press the Read key to select "on"
- Press the Function key to confirm. Alarm icon appears on the screen.

TO SET UNREAD MESSAGE ALERT

If you set this function, the pager alerts by beep when you have unread message.

- Press the Function Key two times in standby mode. "Tone off" or "Tone on" is displayed.
- Hold the Function key until " ERASE ALL" is displayed
- Press the Read key repeatedly until "tone Fcn on" or "tone Fcn off" is displayed.
- Press the Function key for setting.
- Press the Read key to select "tone Fcn on"
- Press the Function key to confirm.

TO SET AUTO POWER ON

If you set this function, the pager power is automatically off from 1:00 A.M to 5:00 A.M.

- Press the Function Key two times in standby mode. "Tone off" or "Tone on" is displayed.
- Hold the Function key until " ERASE ALL" is displayed
- Press the Read key repeatedly until "Set Auto" is displayed.
- Press the Function key to select menu. "Auto off" or "Auto on" is displayed
- Press the Read key to select "Auto on"

- Press the Function key to confirm.

BATTERY INFORMATION

➤ Low Battery Indication

When the battery is low, "Low Battery" is displayed with beep alert.

➤ Replacing the Battery

NIXXO PLATINUM is designed to use a single AAA alkaline battery.

- Slide locking switch to the unlock position.
- Slide the battery cover off the pager.
- Remove the old battery and insert a new one
- AAA battery in the direction shown on the battery compartment

